



Quick Guide

GD-HW-APSV08R

GD-HW-APSV012R


GD-HW-APSV024R

1 Appearance Description

Frontside:



Rearside:

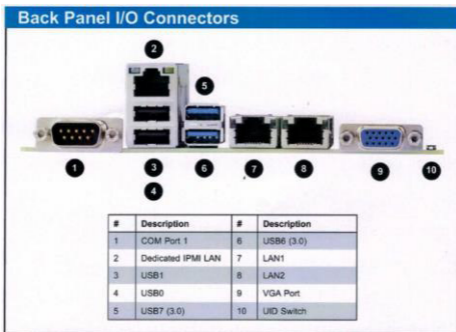

2 Installation

2.1 Start the Server

Connect a USB-Keyboard and USB-Mouse to the front or rear USB-ports on the server.

After supplying the server with electricity press the Start-button on the front. The server boots up and the Windows notifying window appears. Press STRG, ALT and DEL on the keyboard when prompted to start the application.

The Windows Log-In is:

User: **Administrator**

Password: **Grundig1234**.

2.2 Start C-WERK

Start the C-WERK by double clicking onto the C-WERK symbol.



The following window appears:



Log in with **root/root**

then click on

Connect

For detailed information of the operation of the C-WERK software please refer to the following link:

<https://doc.c-werk.com/display/cwerk41en/Documentation>



Safety



Safety Manual

<https://download.grundig-security.com/Grundig-Product-Safety-2024-04-24-V1.pdf>

