



Quick Guide

GD-HW-BPSV04T

GD-HW-BPSV05T

GD-HW-BPSV06T

Safety



<https://download.grundig-security.com/Grundig-Product-Safety->

[2024-04-24-V1](#)

Legal Disclaimer



<https://grundig-security.com/terms-of-use/>

[without prior notice](#)

1 Appearance Description

Frontside:



Rearside:



2 Installation

2.1 Start the PC

Connect the supplied USB-Keyboard and USB-Mouse to the front or rear USB-ports on the server.

After supplying the server with electricity press the ON/OFF-switch on the front. The server boots up and the Windows notifying window appears.

The Windows Log-In is:

User: **Grundig**

Password: **Grundig1234**

2.2 Start C-WERK

Start the C-WERK by double clicking onto the C-WERK icon.



The following window appears:



Log in with **root/root**

then click on

Connect

For detailed information of the operation of the C-WERK software please refer to the following link:

<https://doc.c-werk.com/display/cwerk41en/Documentation>