




Quick Guide


GD-RN-Series

HDD Installation


GD-RN-BC2004P/-BC2416N/-BC2416P

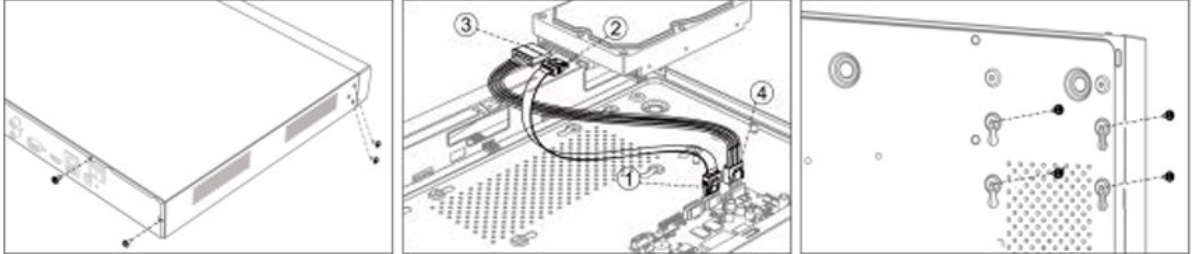


GD-RN-BP8616P/-BP8632N

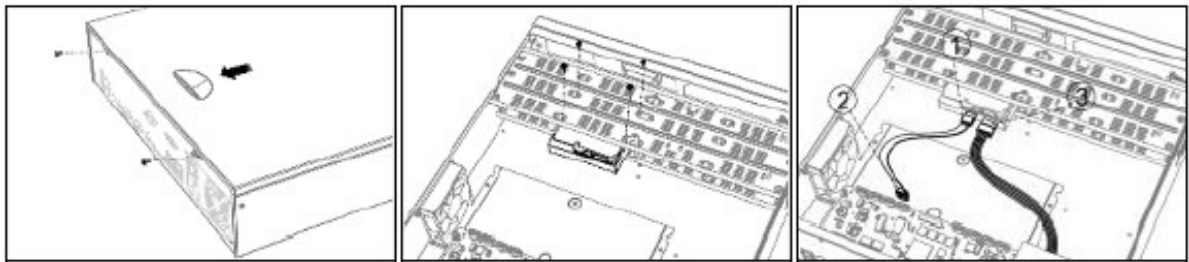

GD-RN-DT8864N/-AT819128N

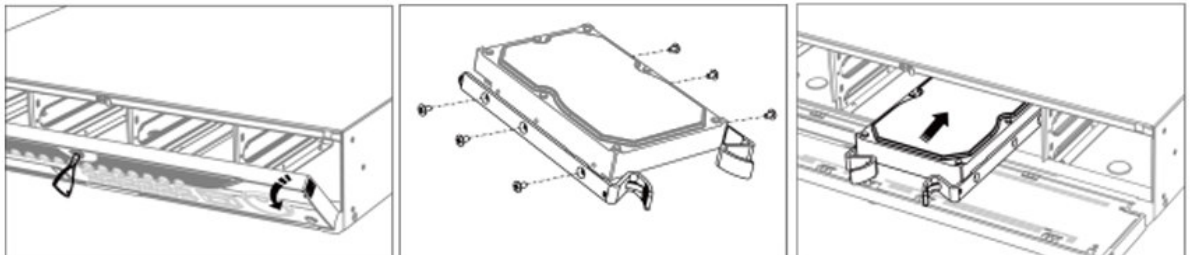

Power

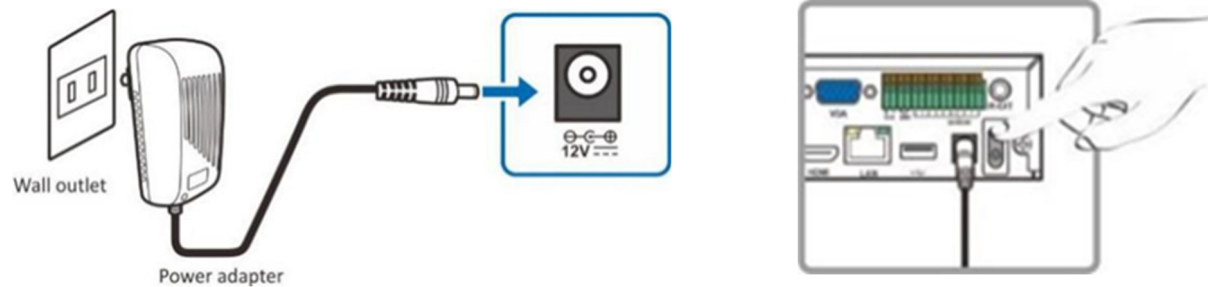

Password

GRUNDIG

User Name

Password

Passwor...

Language

Activation

Security Questions

GRUNDIG

Account Security Settings

Security Question Configuration

Security Question1

Answer

Security Question2

Answer

Security Question3

Answer

Reserved Email

Log In

GRUNDIG

User Name

Password

Language

Log In

[Forgot password?](#)

Manual & Tools



Manual Essential Line

<https://download.grundig-security.com/UG-GD-RN-BC2004P-2024-11-07-V6-EN.pdf>



Manual Pro & Premium Line

<https://download.grundig-security.com/UG-GD-RN-BP8616P-2024-10-31-V6-EN.pdf>



Activation Tool GD-CW-FINDER

<https://grundig-security.com/catalog/software/c-werk/GD-CW-FINDER>



PC-Software GD-SW-SCMS

<https://grundig-security.com/catalog/software/GD-SW-SCMS>



Android SCMS App

<https://play.google.com/store/apps/details?id=com.grundig.scms&hl=de&gl>



iOS SCMS App

<https://apps.apple.com/de/app/scms/id1442059754>



Safety



Safety Manual

<https://download.grundig-security.com/Grundig-Product-Safety-2024-04-24-V1.pdf>