




Quick Guide

GD-RT-Series


HDD Installation

GD-RT-BC3004N/-BC3008N/-BC3016N


GD-RT-AP5004P/-AP8008P/-AP8016P/-AP8016N

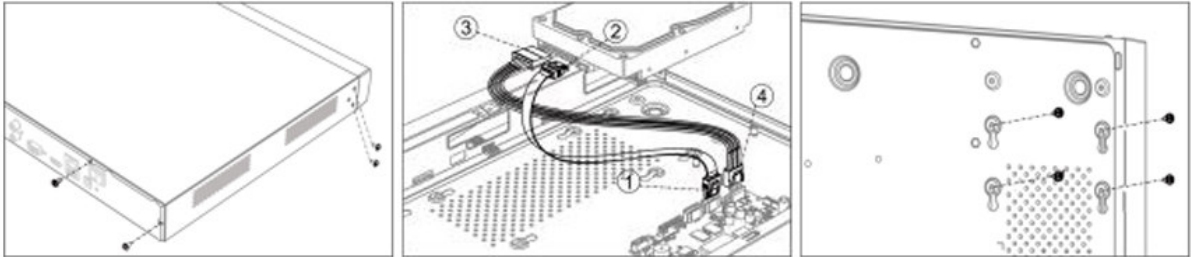

GD-RT-AT8016N

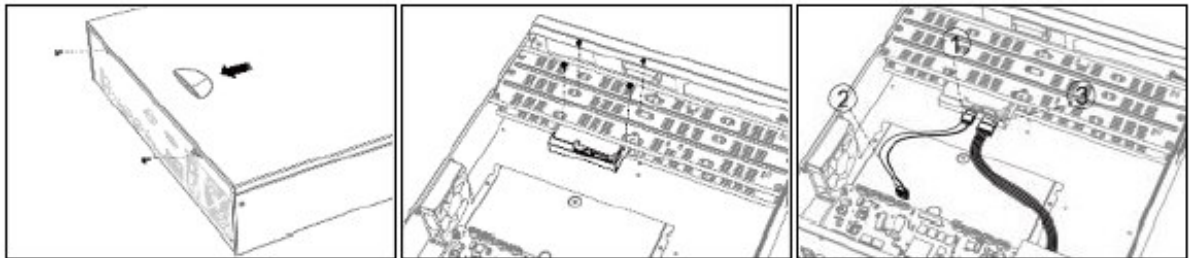

Power

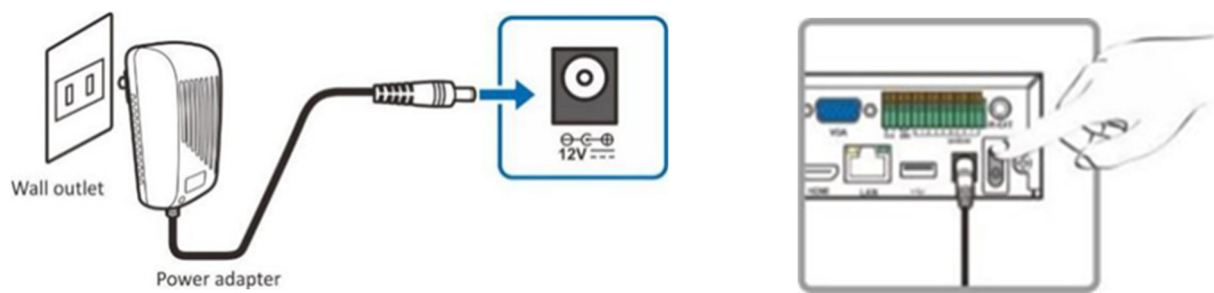

Activation

admin

Weak

Export GUID ?

Security Question Configuration

Reserved E-mail Settings ?

Create Channel Default Password

Note: Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.

OK

Password

Manual & Tools



Manual

<https://download.grundig-security.com/UG-GD-RT-BC3004N-2022-12-28-V5-EN.pdf>



Activation Tool GD-CW-FINDER

<https://grundig-security.com/catalog/software/c-werk/GD-CW-FINDER>



PC-Software GD-SW-SCMS

<https://grundig-security.com/catalog/software/GD-SW-SCMS>



Android SCMS App

<https://play.google.com/store/apps/details?id=com.grundig.scms&hl=de&gl>



iOS SCMS App

<https://apps.apple.com/de/app/scms/id1442059754>



Safety



Safety Manual

<https://download.grundig-security.com/Grundig-Product-Safety-2024-04-24-V1.pdf>