




## **Quick Guide**

**GD-RX-BP3464R**

# 1 Appearance Description

---

**Frontside:**

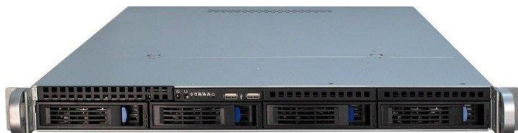

**Rearside:**



## 2 Installation

---

### 2.1 Start the Server

Connect a USB-Keyboard and USB-Mouse to the front or rear USB-ports on the server.

After supplying the server with electricity press the Start-button on the front. The server boots up and the Windows notifying window appears. Press *STRG*, *ALT* and *DEL* on the keyboard when prompted to start the application.

The Windows Log-In is:

User: **Grundig**

Password: **1234**.

### 2.2 Start C-WERK

Start the C-WERK by double clicking onto the C-WERK symbol.



The following window appears:



Log in with root/root

then click on



For detailed information of the operation of the C-WERK software please refer to the following link:

<https://doc.c-werk.com/display/encwerk/Documentation>

Please read the safety instructions.

**Safety**

<https://download.grundig-security.com/Grundig-Product-Safety-2024-04-24-V1.pdf>