



FOR A GOOD REASON  
**GRUNDIG**

GD-CT-AC2116T

WWW.GRUNDIG-SECURITY.COM

UG-GD-CT-AC2116T-2019-03-29-V3-EN ©ABETECHS GMBH, DÜSSELDORF, GERMANY

### Limitation of Liability / Legal Disclaimer

Abetechs GmbH (Grundig Security) undertakes all reasonable efforts to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Abetechs GmbH (Grundig Security) reserves the right to change the contents of this document without prior notice. Design and specifications are subject to change without prior notice.

The product described herein, with its hardware, software and documentation is provided "as is", without any warranty, expressed or implied, including without limitation, merchantability, satisfactory quality, fitness for a particular purpose, and non-infringement of a third party. In no event will our company and its employees or agents be liable to you for any special,

consequential, incidental, or indirect damages, including among others, damages for loss of business profits, business interruption, or loss of data or documentation, in connection with the use of this product, even if our company has been advised of the possibility of such damages.

Regarding to products with internet access, the use of the product shall be wholly at your own risks. Our company shall not take any responsibilities for abnormal operation, privacy leakage or other damages resulting from cyberattack, hacker attack, virus inspection, or other internet security risks; however, our company will provide timely technical support if required. Surveillance laws vary by jurisdiction before using this product in order to ensure that your use conforms to the applicable law. Our company shall not be liable in the event that this product is used with illegitimate purposes. In the event of any conflicts between this manual and the applicable law, the later prevails.

### Trademark:

Each of trademarks herein is registered. The name of this product and other trademarks mentioned in this manual are the registered trademark of their respective company. Copyright of this document is reserved. This document shall not be reproduced, distributed or changed, partially or wholly, without formal authorization.

### OPEN SOURCE SOFTWARE LICENSE INFORMATION

The software components provided with Grundig products may contain copyrighted software that is licensed under various open source software licenses. For detailed information about the contained open source software packages, the used package versions, license information and complete license terms, please refer to the product

detail pages on our website. The complete open source software license information is also included in firmware files of affected products. Please also check your product's CD-ROM and manuals for additional information. You may obtain the complete corresponding open source part of a specific product from us for a period of three years after our last shipment of this product by sending an email to: [info@grundig-security.com](mailto:info@grundig-security.com)

### Introduction

Please read these instructions carefully and keep them for future reference. You must heed all the warnings and cautions as well as follow all the safety and installation instructions. The appearance of the products, functions and firmware or software upgrade may differ from this manual.

GRUNDIG reserves the right to perform needed changes without prior notice.

### Safety Instructions

Make sure that you only use the power adapter that is specified in the specifications sheet of the product. If you use any other adapter or connect the power supply incorrectly, this may cause explosion, fire, electric shocks or damage the product.

Do not connect several devices to one power adapter as this may cause an adapter overload and can lead to over-heating and fire. Make sure that the plug of the power adapter is firmly connected to the power socket.

Do not place containers with liquids on the product. Do not place conducting items like tools, screws, coins or other

metal items on the product. These may fall from the product or can cause fire or electric shocks or other physical injuries.

Do not push or insert any sharp items or any objects into the device as this may cause damage to the product, fire, electric shocks and/or physical injuries.

Do not block any ventilation openings, if there are any. Ensure that the product is well ventilated to prevent any over-heating.

Do not subject the device to physical shock or drop the product.

If the product uses batteries, please use a battery type that is recommended by the manufacturer. Improper use or replacement of the battery may result in the hazard of explosion.

Do not use any accessories that are not recommended by GRUNDIG. Do not modify the product in any way.

If the product starts to smell or smoke comes out of the device, immediately stop using the product and disconnect it from the power supply to prevent fire or electric shocks. Then contact your dealer or the nearest service center.

If the product does not work correctly, contact your dealer or nearest service center. Never open, disassemble or alter the product yourself. GRUNDIG cannot accept any liability or responsibility for problems caused by attempted and unauthorized repair and maintenance.

### Installation Instructions

It is necessary to fix the device firmly if the product is installed on a wall or ceiling.

Do not install the product on surfaces or in places that are vibrating.

Do not install the product near radiation sources.

Do not install the product near heat sources, like radiators or other equipment that produces some heat.

If the product is not classified by any IP class, do not install the product in very cold or hot temperatures (please refer to the working temperature specified in the specification sheet of the product), dusty, dirty or damp environment.

If the product is classified by any IP class, never touch the product cover directly with your fingers, because the acidic sweat of the fingers may damage the surface coating of the product cover. To clean the inside and outside of the product cover, use a soft and dry cloth. In any case, do not use alkaline detergents. The correct configuration of all passwords and other security settings is the sole responsibility of the installer and/or end-user (this applies especially to IP Cameras and Recorders).

### Special Installation Instructions for Cameras

Do not touch the sensor module with your fingers.

Do not aim the camera or camera lens at a strong light such as the sun or a bright lamp. Irreversible damage to the camera can be caused by a strong light.

Do not expose the sensor of the product to laser beams as this may damage the sensor.

If the product supports IR, you need to take some precautions to prevent IR reflection. Do not install the product close to reflective surfaces of objects as this may cause reflection. If the product has a dome cover, please remove the protection film only after installation to prevent dust or grease on the camera which can cause reflection. The foam ring around the lens must be seated flush against the inner surface of the bubble to isolate the lens from the IR LEDs. Fasten the dome cover to the

camera body so that the foam ring and the dome cover are attached seamlessly.

For cleaning use a clean cloth with a bit of ethanol and wipe it carefully and gently. In any case do not use alkaline detergents.

If a glove is provided in the package, please use it to open the product cover. Never touch the product cover directly with fingers, because the acidic sweat of the fingers may damage the surface coating of the product cover.

## 1 INTRODUCTION

This series of camera adopts new generation sensor with high sensitivity and advanced circuit design technology. It features high resolution, low image distortion and low noise, etc., which makes it suitable for surveillance system and image processing system.

- High performance CMOS sensor and high resolution bring high-quality image;
- Low illumination;
- OSD menu, parameters are configurable;
- Support auto white balance, auto gain control,
- Support image effect adjustment;
- Unit transmission control;
- Advanced 3-axis design meets different installation requirements.

### 1.2 Overview

#### 1.2.1 Overview of Type I Camera

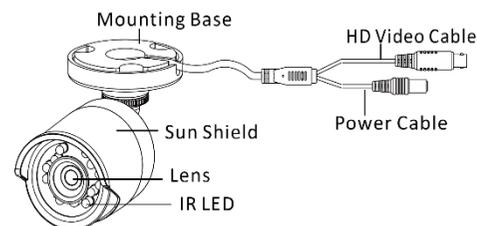


Figure 1-1 Overview of Type I Camera

#### 1.2.2 Overview of Type II Camera

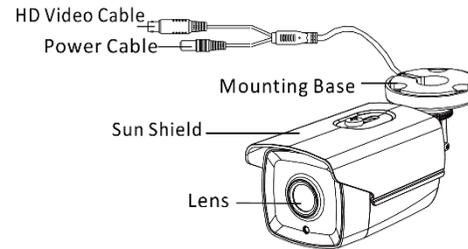


Figure 1-2 Overview of Type II Camera

#### 1.2.3 Overview of Type III Camera



Figure 1-3 Overview of Type III Camera

## 2 INSTALLATION

Before you start:

- Please make sure that the device in the package is in good condition and all the assembly parts are included.
- Make sure that all the related equipment is power-off during the installation.
- Check the specification of the products for the installation environment.
- Check whether the power supply is matched with your power output to avoid damage.
- Please make sure the wall is strong enough to withstand three times the weight of the camera and the mounting.
- If the wall is made of cement, you need to insert expansion screws before you install the camera.

If it is a wooden wall, you can use self-tapping screw to secure the camera.

- If the product does not function properly, please contact your dealer or the nearest service center. Do not disassemble the camera for repair or maintenance by yourself.

### 2.1 Installation of Type I Camera

Steps:

1. Drill the screw holes according to the drill template.
2. Screw the clip plate onto the mounting base loosely.



Figure 2-1 Drill Template

3. Route the cables to the cable hole and connect the corresponding power cable and video cable.
4. Fix the camera to the ceiling with the supplied screws.

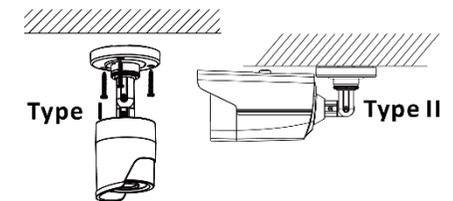


Figure 2-2 Fix the Camera to the Ceiling

5. Adjust the surveillance angle.

- 1). Loosen No.3 adjusting screw to adjust the panning position (0° ~ 360°).
- 2). Tighten No.3 adjusting screw.
- 3). Loosen the No.2 adjusting screw to adjust the tilting position (0° ~ 90°).

- 4). Tighten No.2 adjusting screw.
- 5). Loosen No.1 adjusting screw to adjust the azimuth angle of the image (0° ~ 360°).
- 6). Tighten No.1 adjusting screw.

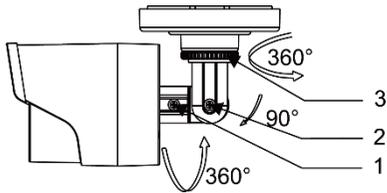


Figure 2-3 3-axis Adjustment

## 2.2 Wall Mounting for Type III Camera

Steps:

1. Wiggle the mounting plate to disassemble it from the wall mount.

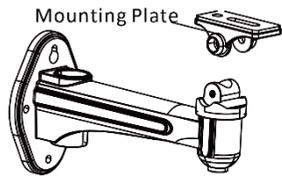


Figure 2-4 Disassemble Mounting Plate

1. Drill the screw holes on the wall according to the supplied drill template.
2. Attach the wall mount to the wall and tighten the screws to fix it.

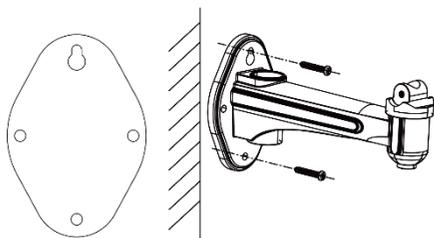


Figure 2-5 Drill Template & Install Mount

4. Screw the mounting plate onto the camera.

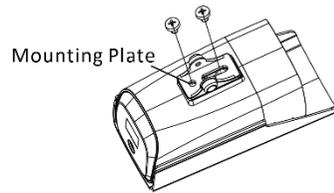


Figure 2-6 Screw the Mounting Plate

5. Fix the camera to the wall mount with the supplied screws.

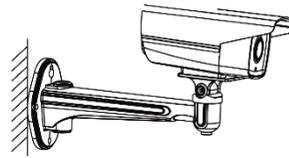


Figure 2-7 Fix the Camera

5. Adjust the surveillance angle.

- 1). Loosen No.1 adjusting screw to adjust the pan position (0° ~ 360°).
- 2). Tighten No.1 adjusting screw.
- 3). Loosen No.2 adjusting screw to adjust the tilting position(0° ~ 90°).
- 4). Tighten No.2 adjusting screw.

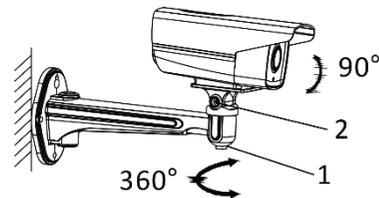


Figure 2-8 Angle Adjustment

## 3 MENU OPERATION

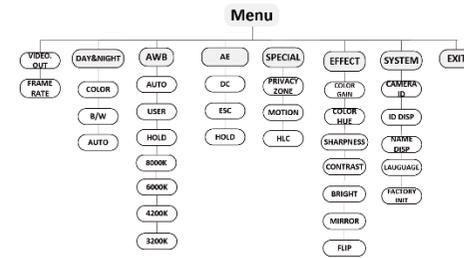


Figure 3-1 Main Menu

A coaxial camera controller (purchase separately) is required to select the menu and adjust the camera parameters.

### 3.1 VIDEO.OUT

You can set the frame rate as 25 fps/30fps.

### 3.2 DAY/NIGHT

Color, B/W, AUTO and EXT are selectable for DAY/NIGHT switches. Under the mode of the AUTO and EXT, you can set the IR LED as Smart and CDS. If the IR LED is selected as Smart, you can set the brightness of the IR LED.

DAY/NIGHT	
1. MODE	AUTO
2. D TO N	63
3. N TO D	63
4. DELAY TIME	20
5. RETURN	RET

Figure 3-2 DAY/NIGHT

AWB	
1. MODE	AUTO
2. R-G GAIN	255
3. B-G GAIN	151
4. RETURN	RET

Figure 3-3 AWB

### 3.3.3 AWB

Auto, User, Push, 8000k, 6000k, 4200k and 3000k are selectable for AWB. Under the mode of AUTO, you need to set the R-G/B-G Gain and to select an indoor/outdoor mode. If the AWB mode is select as User, You need to set the R/G/B Gain manually.

### 3.3.4 AE

You can set the AE mode as HOLD, DC and ESC.

**Brightness:** Brightness refers to the brightness of the image.

**Shutter:** Shutter denotes the speed of the shutter.

You can set the shutter as AUTO, 1/25, 1/30, 1/50, 1/60, 1/100, 1/120, 1/250, 1/500, 1/1k, 1/3k and 1/10k.

**Flicker:** You can set the flicker status as 50HZ/60HZ to prevent image flicking.

**BLC:** BLC bases on the back area to enhance the brightness of the whole image. You can set the BLC gain from 0 to 16.

**AGC:** AGC optimizes the clarity of image in poor light scene. The value of AGC can be set from 1-5.

**LSC:** LSC corrects the phenomenon where the image gets darkened or blurred on the periphery.

### 3.3.5 SPECIAL

SPECIAL	
1. PRIVACY ZONE	
2. MOTION	
3. HLC	
4. RETURN	RET

Figure 3-4 SPECIAL

**Privacy zone:** Select a PRIVACY area. Set the MASK PAT as OFF, GRAY, WHITE or BLACK. Set the SX/EX/SY/EY value to define the position and size of the area.

**Motion:** Set the Motion status as ON or OFF. Set the SENSITIVITY from 0 to 255. Set the alarm status as ICON/TRANCE/OFF. Set the hold time from 0 second to 255 seconds.

**HLC:** HLC supplements the brightness of the peripheral area of the image. You can set the mask value and threshold from 0 to 255.

### 3.3.6 EFFECT

EFFECT	
1. COLOR GAIN	200
2. COLOR HUE	200
3. SHARPNESS	25
4. CONTRAST	150
5. BRIGHT OFF.	1
6. MIRROR	ON
7. FLIP	ON
8. RETURN	RET

Figure 3-5 EFFECT

**Color Gain:** Color gain adjust this feature to change the saturation of the color. You can set the value from 0 to 255.

**Color Hue:** You can adjust the image HUE from 0 to 71.

**Sharpness:** Sharpness determines the amount of detail that an imaging system can reproduce. You can set the value from 0 to 255.

**Contrast:** Contrast enhances the difference in color and light between parts of an image. You can set the value from 0 to 255.

**Bright Off.:** Bright Off. refers to the brightness compensation of the image. You can set the bright compensation value as 0 or 1.

**Mirror:** You can set the Mirror status as ON/OFF.

**Flip:** You can set the FLIP status as ON/OFF.

### 3.3.7 SYSTEM

SYSTEM	
1. CAMERA ID	255
2. ID DISP.	ON
3. NAME DISP.	ON
4. LANGUAGE	ENG
5. FACTORY INIT	OFF
6. RETURN	RET

Figure 3-6 SYSTEM

You can set the camera ID from 0 to 255.

Select the ID display and name display status as ON/OFF.

Chinese and English are selectable for the language of the menu.

You can restore the camera to the default by setting the factory initialization status as ON.

### 3.3.8 EXIT

Exit and Save & exit are selectable.

[WWW.GRUNDIG-SECURITY.COM](http://WWW.GRUNDIG-SECURITY.COM)

UG-GD-CT-AC2116T-2019-03-29-V3-EN ©ABETECHS GMBH, DÜSSELDORF, GERMANY