

Quick Guide

GD-CI-CC4637T



grundig-security.com



Quick Guide

About this guide

The guide includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the guide is subject to change, without notice, due to firmware updates or other reasons.

Please find the latest version at WWW.GRUNDIG-SECURITY.COM

Limitation of Liability / Legal Disclaimer

Abetechs GmbH (Grundig Security) undertakes all reasonable efforts to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Abetechs GmbH (Grundig Security) reserves the right to change the contents of this document without prior notice. Design and specifications are subject to change without prior notice.

The product described herein, with its hardware, software and documentation is provided "as is", without any warranty, expressed or implies, including without limitation, merchantability, satisfactory quality, fitness for a particular purpose, and non-infringement of a third party.

In no event will our company and its employees or agents be liable to you for any special, consequential, incidental, or indirect damages, including among others, damages for loss of business profits, business interruption, or loss of data or documentation, in connection with the use of this product, even if our company has been advised of the possibility of such damages.

Regarding to products with internet access, the use of the product shall be wholly at your own risks. Our company shall not take any responsibilities for abnormal operation, privacy leakage or other damages resulting from cyber-attack, hacker attack, virus inspection, or other internet security risks; however our company will provide timely technical support if required. Surveillance laws vary by jurisdiction before using this product in order to ensure that your use conforms to the applicable law. Our company shall not be liable in the event that this product is used with illegitimate purposes.

In the event of any conflicts between this manual and the applicable law, the later prevails.

Trademark

Each of trademarks herein is registered. The name of this product and other trademarks mentioned in this manual are the registered trademark of their respective company.

Copyright of this document is reserved. This document shall not be reproduced, distributed or changed, partially or wholly, without formal authorization.

OPEN SOURCE SOFTWARE LICENSE INFORMATION

The software components provided with Grundig products may contain copyrighted software that is licensed under various open source software licenses. For detailed information about the contained open source software packages, the used package versions, license information and complete license terms, please refer to the product detail pages on our website. The complete open source software license information is also included in firmware files of affected products. Please also check your manuals for additional information.

You may obtain the complete corresponding open source part of a specific product from us for a period of three years after our last shipment of this product by sending an email to: <u>info@grundig-security.com</u>

Safety and Installation Instructions

Introduction

Please read these instructions carefully and keep them for future reference. You must heed all the warnings and cautions as well as follow all the safety and installation instructions.

The appearance of the products, functions and firmware or software upgrade may differ from this manual.

GRUNDIG reserves the right to perform needed changes without prior notice.

Safety Instructions

Make sure that you only use the power adapter that is specified in the specifications sheet of the product. If you use any other adapter or connect the power supply incorrectly, this may cause explosion, fire, electric shocks or damage the product. Do not connect several devices

to one power adapter as this may cause an adapter overload and can lead to over-heating and fire. Make sure that the plug of the power adapter is firmly connected to the power socket.

Do not place containers with liquids on the product. Do not place conducting items like tools, screws, coins or other metal items on the product. These may fall from the product or can cause fire or electric shocks or other physical injuries.

Do not push or insert any sharp items or any objects into the device as this may cause damage to the product, fire, electric shocks and/or physical injuries.

Do not block any ventilation openings, if there are any. Ensure that the product is well ventilated to prevent any over-heating.

Do not subject the device to physical shock or drop the product.

If the product uses batteries, please use a battery type that is recommended by the manufacturer. Improper use or replacement of the battery may result in the hazard of explosion.

Do not use any accessories that are not recommended by GRUNDIG. Do not modify the product in any way.

If the product starts to smell or smoke comes out of the device, immediately stop using the product and disconnect it from the power supply to prevent fire or electric shocks. Then contact your dealer or the nearest service center.

If the product does not work correctly, contact your dealer or nearest service center. Never open, disassemble or alter the product yourself. GRUNDIG cannot accept any liability or responsibility for problems caused by attempted and unauthorized repair and maintenance.

4

Installation Instructions

It is necessary to fix the device firmly if the product is installed on a wall or ceiling. Do not install the product on surfaces or in places that are vibrating. Do not install the product near radiation sources.

Do not install the product near heat sources, like radiators or other equipment that produces some heat. If the product is not classified by any IP class, do not install the product in very cold or hot temperatures (please refer to the working temperature specified in the specification sheet of the product), dusty, dirty or damp environment.

If the product is classified by any IP class, never touch the product cover directly with your fingers, because the acidic sweat of the fingers may damage the surface coating of the product cover. To clean the inside and outside of the product cover, use a soft and dry cloth. In any case, do not use alkaline detergents. The correct configuration of all passwords and other security settings is the sole responsibility of the installer and/or end-user (this applies especially to IP Cameras and Recorders).

Special Installation Instructions for Cameras

Do not touch the sensor module with your fingers. Do not aim the camera or camera lens at a strong light such as the sun or a bright lamp. Irreversible damage to the camera can be caused by a strong light.

Do not expose the sensor of the product to laser beams as this may damage the sensor.

If the product supports IR, you need to take some precautions to prevent IR reflection. Do not install the product close to reflective surfaces of objects as this may cause reflection. If the product has a

5

dome cover, please remove the protection film only after installation to prevent dust or grease on the camera which can cause reflection. The foam ring around the lens must be seated flush against the inner surface of the bubble to isolate the lens from the IR LEDS. Fasten the dome cover to the camera body so that the foam ring and the dome cover are attached seamlessly.

For cleaning, use a clean cloth with a bit of ethanol and wipe it carefully and gently. In any case, do not use alkaline detergents.

If a glove is provided in the package, please use it to open the product cover. Never touch the product cover directly with fingers, because the acidic sweat of the fingers may damage the surface coating of the product cover.

Special Installation Instructions for IP Cameras

Make sure that the latest firmware is installed on the IP Device. You may get the latest firmware from <u>techsupport@grundig-security.com</u>.

Table of Contents

1 Appearance Description	8
1.1 Camera	8
2 Installation	10
2.1 Memory Card Installation	10
2.2 Camera Mounting	12
2.2.1 Direct Mounting	13
2.2.2 Mounting with a Junction Box	15
2.3 Zoom and Focus Adjustment	17
3 Setting the IP- Camera over the LAN	19
3.1 Wiring	19
3.2 Activating the Camera	20
3.2.1 Activation via Web Browser	20
3.2.2 Activation via IP-Finder Software	21
3.3 Modifying the IP Address	23
4 Accessing via Web Browser	25
4.1 Initializing the Memory Card	27

1 Appearance Description

1.1 Camera

The overview of the camera is shown below.

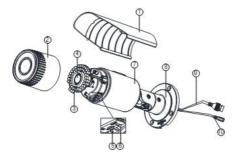


Figure 1-1 Overview of Camera

Table 1-1 Description

No.	Description
1	Sun Shield
2	Front Cover
3	IR LED

No.	Description
4	Lens
5	Memory Card Slot
6	Reset Button
7	Camera Body
8	Bracket
9	Network Cable
10	Power Cord

Note:

Press RESET about 10s when the camera is powering on or rebooting to restore the default settings, including the user name, password, IP address, port No., etc.

2 Installation

2.1 Memory Card Installation

This series of cameras support memory card installation.

Steps:

1. Rotate the lock screw counterclockwise to loosen it.



Figure 2-1 Loosen the Lock Screw

2. Remove the sun shield.




Figure 2-2 Remove the Sun Shield

- 3. Remove the front cover by rotating it counterclockwise.
- 4. Insert the memory card into the memory card slot.




Figure 2-3 Insert the Memory Card

- 5. Rotate the front cover clockwise back to the camera and install the sun shield back.
- 6. Tighten the lock screw clockwise to tighten the sun shield.




Figure 2-4 Tighten the Front Cover

Note:

For water-proof performance, align the rotating label on the front cover with that on the camera when you rotate the front cover clockwise.

2.2 Camera Mounting

Before you start:

Camera of these types is equipped with a bracket. It can be mounted to a wall or a ceiling directly and can also be mounted with a junction box.

2.2.1 Direct Mounting

Steps:

- 1. Attach the drill template (supplied) to the wall or the ceiling where the camera is to be mounted.
- 2. Drill screw holes in the wall or ceiling according to the hole 1 on the drill template.




Figure 2-5 Drilling Holes in the Wall/Ceiling

- If you need to route cables through the wall (or the ceiling), cut a cable hole according to the drill template. Skip this step if you want to route the cables on the surface of the wall (or the ceiling).
- 4. Route the cables of the camera.
- Secure the camera to the wall (or the ceiling) with the expansion screws.




Figure 2-6 Secure the Camera

6. Adjust the view angle.

3-axis (pan/tilt/rotation) adjusting allows adjustment for optimum camera rotation and placement. Follow the steps below to adjust the view angle.

Pan Adjustment

Steps:

- 1). Loosen the lock screw 1.
- Adjust the panning position of the camera. The adjusting range is from 0° to 360°.
- 3). Tighten the lock screw 1.

Tilt Adjustment

Steps:

- 1). Loosen the lock screw 2.
- 2). Adjust the tilting position of the camera. The adjusting range is from 0° to 100°.
- 3). Tighten the lock screw 2.

Rotation Adjustment

Steps:

- 1). Loosen the lock screw 3.
- Rotate the rotation position to adjust the azimuth angle of the image. The adjusting range is from 0° to 360°.
- 3). Tighten the lock screw 3.




Figure 2-7 View Angle Adjustment

- Adjust zoom and focus (refer to Section 3 Zoom and Focus Adjustment).
- 8. (Optional) Install the water-proof jacket for network interface.
- Installation of Network Cable Water-proof Jacket (Optional) for detailed installation procedures.

2.2.2 Mounting with a Junction Box

Before you start:

The junction box is not included in the package. You need to prepare one for this mounting type.

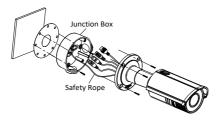


Figure 2-8 Mounting with a Junction Box

Steps:

- Attach the drill template (supplied) to the wall where the camera is to be mounted and drill holes in the wall according to hole 2 on the drill template. See Figure 2.5.
- If you need to route cables through the wall (or the ceiling), cut a cable hole according to the drill template. Skip this step if you want to route the cables on the surface of the wall (or the ceiling).
- Secure the junction box to the wall (or the ceiling) with the expansion screws.
- 4. Hook the camera to the junction box with the safety rope.
- 5. (Optional) Install the water-proof jacket for network interface.
- Installation of Network Cable Water-proof Jacket (Optional) for detailed installation procedures.
- Route the cables of the camera. Connect the cables and power on the camera to see if you can get an image on your monitoring screen.

Note:

If you can't get the image, check the power and network connection before performing the next step.

- 8. Secure the camera to the junction box with the screws.
- 9. Adjust the view angle. Refer to Step 6 in Section 2.2.1 Direct Mounting.
- 10. Adjust zoom and focus (refer to Section 2.3 Zoom and Focus Adjustment).

2.3 Zoom and Focus Adjustment

Purpose:

You can use the zoom lever and focus lever to adjust the zoom and focus level. Follow the steps below to adjust focus and zoom. We take type II camera as the example to explain the adjusting steps.

Steps:

- 1. Remove the sun shield and front cover to expose the zoom lever and the focus lever.
- 2. View the camera image on the monitoring screen.
- Loosen the zoom lever and move the lever between T (Tele) and W (Wide) to obtain the desired angle of view.
- 4. Tighten the zoom lever.
- 5. Loosen the focus lever and move the lever between F (Far) and N (Near) to obtain the optimum focus.
- 6. Tighten the focus lever.
- 7. Install the sun shield and the front cover back to the camera.

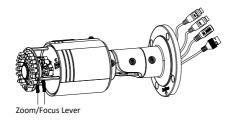


Figure 2-9 Zoom and Focus Adjustment

For cameras which are equipped with a motor-driven lens you can adjust the zoom and focus level on PTZ control panel by visiting the camera via web browser or client software.




Figure 2-10 Zoom- Focus adjustment via Web Browser

3 Setting the IP- Camera over the LAN


Note:


You shall acknowledge that the use of the product with Internet access might be under network security risks. For avoidance of any network attacks and information leakage, please strengthen your own protection.

If the product does not work properly, contact your dealer or the nearest service center for help.

3.1 Wiring

Connect the camera to network according to the following figures.








Figure 3-2 Connecting via a Switch or a Router

3.2 Activating the Camera

You are required to activate the camera first by setting a strong password for it before you can use the camera.

Activation via Web Browser, Activation via Grundig IP-Finder, and Activation via Client Software are all supported. We will take activation via Grundig IP-Finder software and Activation via Web Browser as examples to introduce the camera activation.

3.2.1 Activation via Web Browser

Steps:

- 1. Power on the camera. Connect the camera to your computer or the switch/router which your computer connects to.
- Input the IP address into the address bar of the web browser, and press Enter to enter the activation interface.


Notes:

- The default IP address of the camera is 192.168.1.100.
- The computer and the camera should belong to the same subnet.
- For the camera enables the DHCP by default, you need to use the Grundig IP-Finder software to search the IP address.

Activation		
User Name	admin	
Password	••••••	Strong
	Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.	
Confirm	•••••	0
		ОК



3. Create a password and input the password into the password field.

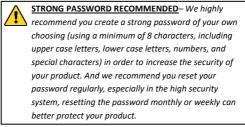

4. Confirm the password.

5. Click OK to save the password and enter the live view interface.

3.2.2 Activation via IP-Finder Software

Grundig Finder software is used for detecting the online device and activating the camera.

Get the Grundig Finder software from the official website <u>www.grundig-security.com</u> and install the software according to the prompts. Follow the steps to activate the camera, please refer to the User manual for other two activation methods.

Steps:

- 1. Run the Finder software to search the online devices.
- 2. Check the device status from the device list and select the inactive device.

State State <th< th=""><th>0</th><th>Basel</th><th>Model</th><th>Terman</th><th></th><th>040</th><th></th><th>104</th><th>Grimely</th><th></th><th>100.941</th><th>Seathorite</th><th>982</th><th>Athe</th><th>in the device</th></th<>	0	Basel	Model	Terman		040		104	Grimely		100.941	Seathorite	982	Athe	in the device
Image Image <th< td=""><td></td><td>Grandig</td><td></td><td></td><td>hatte</td><td>01</td><td>192.348.64.90</td><td></td><td></td><td>-</td><td></td><td></td><td></td><td></td><td></td></th<>		Grandig			hatte	01	192.348.64.90			-					
Norme Norm< Norme Norme <th< td=""><td></td><td>Grundig</td><td>60-0-274637T</td><td></td><td>inative</td><td>01</td><td>192.198.64.96</td><td></td><td></td><td>80</td><td>-</td><td></td><td></td><td></td><td>_</td></th<>		Grundig	60-0-274637T		inative	01	192.198.64.96			80	-				_
2 2000 Control (1) Control (1															~
0 000000000000000000000000000000000000	4	Grandig			inative	01				80					
Jose General de la construir de la con	5		60-0-47124377		hette	01	192,198,1,300								· ·
New Own Own <td></td> <td>Grandig</td> <td>60-0-8765258</td> <td></td> <td>hatte</td> <td>07</td> <td>142.548.2.5</td> <td></td> <td></td> <td>-</td> <td>-</td> <td></td> <td></td> <td></td> <td></td>		Grandig	60-0-8765258		hatte	07	142.548.2.5			-	-				
9 000000000000000000000000000000000000															
Description Objective Objective Objective Distribution Distribution <thdistribution< th=""> <thdistribution< th=""></thdistribution<></thdistribution<>															
0 000000000000000000000000000000000000															
9 000000000000000000000000000000000000		Grundig							152,168,64.5	80	0		A4-04-22-48-05-76		
1 hwo 0.04007 0.04017<	17	Grundig	60-0-4056371	V91.35.82.3.4,29.	Atte	0n	192.346.64.102	255.255.255.0	192168-64.5	-			A4-06-12-48-00-41	Technica	h and a final set
Norm Out-SetUP Object Mathematical Mathematical 1 Source Staticity Mathematical Staticity Mathematical 1 Source Staticity Mathematical Mathematical Mathematical 1 Source Staticity Mathematical Mathematical Mathematical 1 Source Staticity Staticity Staticity Staticity Mathematical 1 Source Staticity	10	Grundig	GU-0-405617T	VIL15.823_230.	Active	01	18.10.25.152	255,255.0.0	103003	80	0		A4-D6-32-A8-00-25		
3 0mm 00-4500 10320320 mm 00 10300 20330 20330 0 0 0 44020400 10000000000000000000000	12	Orandig	00-0-AC\$837Y	V32.35-82.3_250.	Active	01	192,298,84.42	25.25.250	252,288,64.3	80	0		A4 04-12 48 00-45		
11 Guidg 60.984.042104 VALID 2000012 Anno 07 193.3862.016 0.000 0 Anno 06.0144.0011 Name NoRManna 0 Guidg Gibbarcanov VALID 2000012 Name NorManna 0 Andoli 2044.0011 Name NorManna 0 Guidge Gibbarcanov VALID 2000012 Name NorManna 0 Andoli 2044.0011 Name NorManna 0 Guidge Gibbarcanov VALID 2000012 Name NorManna 0 Andoli 2044.0011 Name NorManna 0 Guidge Gibbarcanov VALID 2000012 Name NorManna 0 Andoli 2044.0011 Name NorManna	14	Grundig	60-0-#C5637V	VIL15823,330.	Active	ûn	182.368.64.42	2552552554	102168.645	80	0		A4-04-32-48-00-40		
10 0004 000400004 02.03100001 0001001 00010000 00010000 00010000 00010000 00010000 00010000 00010000 00010000 00010000 00010000 00010000 00010000 000100000 000100000 000100000 000100000 000100000 000100000 000100000 000100000 000100000 000100000 0001000000 0001000000 0001000000 0001000000000000000000000000000000000	15	Grundig	60-0-4056378	V31.35.8.2.3_230	Active	05	192,198,2.35	255,255,255,0	1921682.0	80	0		A4-D4-22-48-00-34		
8 GV00 G049-KED04 VE233-SED07E Alter 01 1923834/3 2525.2550 25286453 80 0 MIGE248-0058 Persent	11	Grandy	60-8%-6P8216N	V8232-00090418	Active	01	192.348.2.258	255,255,255.0	0008	-			A4 68-12 48-00 71		y techation
		Grundig	GU-8%-AC3204P	VE2.3.3-31030721	Active	(in	182.168.64.71	255,255,255,0	182.168.64.5	80	0		A4-D4-32-48-00-06		
	26	Grandig	00-85-403204P	V8.2.5.2 28290721	Atte	01	192,298,8434	25.25.250	252,258,64.3	-	0		A4 04-22 48 00 94		

Figure 3-4 Grundig IP-Finder Interface

Note:

The software supports activating the camera in batch. Refer to the user manual of Grundig Finder software for details.

Create and input the new password in the password field, and confirm the password.



STRONG PASSWORD RECOMMENDED- We highly

recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

4. Click Activate to start activation.

You can check whether the activation is completed on the popup window. If activation failed, make sure that the password meets the requirement and try again.

3.3 Modifying the IP Address

Purpose:

To view and configure the camera via LAN (Local Area Network), you need to connect the network camera in the same subnet with your PC.

Use the Grundig IP-Finder software or client software to search and change the IP address of the device. We take modifying the IP Address via Grundig IP-Finder software as an example to introduce the IP address modification.

For IP address modification via client software, refer to the user manual of client software.

Steps:

- 1. Run the Grundig IP-Finder software.
- 2. Select an activate device.
- Change the device IP address to the same subnet with your computer by either modifying the IP address manually or checking the checkbox of Enable DHCP.

Update network par	rams
✓ DHCP	
IP Address 192.168.64	1.102
Mask: 255.255.25	55.0
Gateway: 192.168.64	1.5
SDK Port: 8000	
HTTP Port: 80	
Update	
opuate	

Figure 3-5 Modify the IP Address

 Input the admin password and click Update to activate your IP address modification.

The batch IP address modification is supported by the Grundig IP-Finder. Please refer to the User Manual of Grundig IP-Finder for details.

4 Accessing via Web Browser

System Requirement:

Operating System: Microsoft Windows XP SP1 and above version

CPU: 2.0 GHz or higher

RAM: 1G or higher

Display: 1024×768 resolution or higher

Web Browser: Internet Explorer 8 and above version, Apple Safari 16 and above version, Mozilla Firefox 52.0 and above version and Google Chrome 57.0 and above version

Steps:

- 1. Open the web browser.
- In the browser address bar, input the IP address of the network camera, and press the Enter key to enter the login interface.

Note:

- The default IP address is 192.168.1.100. You are recommended to change the IP address to the same subnet with your computer.
- 3. Input the user name and password.

The admin user should configure the device accounts and user/operator permissions properly. Delete the unnecessary accounts and user/operator permissions.

Note:

The device IP address gets locked if the admin user performs 7 failed password attempts (5 attempts for the user/operator).

4. Click Login.



Figure 4-1 Login Interface

 Install the plug-in before viewing the live video and managing the camera. Please follow the installation prompts to install the plugin.

Note:

You may have to close the web browser to finish the installation of the plug-in.



Figure 4-2 Download Plug-in

6. Reopen the web browser after the installation of the plug-in and repeat steps 2 to 4 to login.

Note:

For detailed instructions of further configuration, please refer to the user manual.

4.1 Initializing the Memory Card

Steps:

Check the memory card status by tapping on the Storage Status in the Device Settings interface.

If the memory card status displays as uninitialized, tap to initialize it. The status will then change to Normal. You can then start recording any event triggered video in the camera such as motion detection.

grundig-security.com



QG-GD-CI-CC4637T-2023-08-14-V5-EN @ABETECHS GMBH, DÜSSELDORF, GERMANY