



User Guide

GU-HW-ACSW04D

GU-HW-ACSW08D

GU-HW-ACSW16R

Content

1 Getting started	3
1.1 Introduction	3
1.2 Appearance part instructions.....	3
1.2.1 Front Panel	3
1.2.2 Rear Panel	4
2 Add device.....	5
3 Remote Configuration	6
3.1 System Configuration	6
3.1.1 Device Information.....	6
3.1.2 Device Maintenance.....	6
3.2 Network Configuration.....	7
3.3 Port Configuration.....	8
3.3.1 Attributes Configuration.....	8
3.3.2 Remote Configuration	8
3.4 Log management.....	8
3.5 User management.....	10
4 Topology presentation	11
4.1 Related operating.....	11
4.2 Topology Setting.....	12

1 Getting started

1.1 Introduction

Thank you for purchasing a GRUNDIG product. Before installing or connecting the product, please read first the documents:

- Legal Disclaimer
- Safety Instructions
- Installation Manual for the respective product model

Further information about the product like Data Sheets, CE Documents, etc. can be found on the web page www.grundig-security.com.

1.2 Appearance part instructions

This chapter describes the detailed instructions of the switch front and rear panels, and the LED indicators.

1.2.1 Front Panel



Figure 1-1 Diagram of front Panel

Indicator Light

Indicator	State	Description
PoE	Green light always on	PoE port power supply is normal
	Always off	PoE port is not powered
Link/Act	Yellow light always on	The device is connected with the port normally
	Yellow light is flicking	Data is transmitted by the port
	Always off	Device is not connected with the port
PoE-MAX	Light on	The gross power of the PoE port has reached or exceeded the alarm value
	Light off	The gross power of the PoE port is less than the alarm value or haven't been connected with a powered device

CAUTION

The priority of the PoE port power supply is as follows: The larger the port number, the lower the priority. If the gross power of all powered PoE equipment is higher than the maximum output power of the device, the switch will cut off the power supply for the largest port on the connected device. For example, ports number 1,2,5,8 are in the progress of a 14W normal power

supply, and the total power supply of the system is 56W. If now a powered equipment with 15W is connected to one of the ports, the system will cut off the power supply automatically for port 8, because the power supply is overloaded. That is means, ports 1, 2, and 5 are still supplied with 14W power, the new ports supplied with 15W, but Ports 8 will no longer be supplied with the power.

1. Reset Button

Reset hole	Long press for 3 seconds	The device password will be restored to default value
	Long press for 10 seconds	All device parameters are restored to default values

2. Red Port

Red port is a port with a high priority for up-going forwarding, it is identified an area in red on the device, and has the below privileges:

- Under the circumstance of up-going congestion, data is transmitted firstly on the ports of this area.
- When the gross power of PoE has exceeded the limit, give priority to the output power of ports in the area.

3. Uplink Port

4 Port switches support 10/100Mbps full-duplex communication, and 8 Port switches support 10/100/1000Mbps full-duplex communication, but do not provide PoE function.

1.2.2 Rear Panel



Figure 1-2 Diagram of Rear Panel

1. Power Interface

Please use a 48V power supply to connect the powered adapter, if the power supply does not match, the switch will be damaged.

2. Lightning protection grounding pole

Located on the left of the power interface, it must be connected to a lightning protection to prevent the device from a lightning damage.

2 Add device

The device can be configured and managed through the VMS Pro client software, including network parameter configuration, port configuration, and network topology display and searching.

The device used for the first time must be activated first, set up the login password. Please install the VMS Pro client first and follow the instructions.

Operating steps

1. In the interface of **Video Management** ---> **Auto Search**, select the device, Click  for activation.

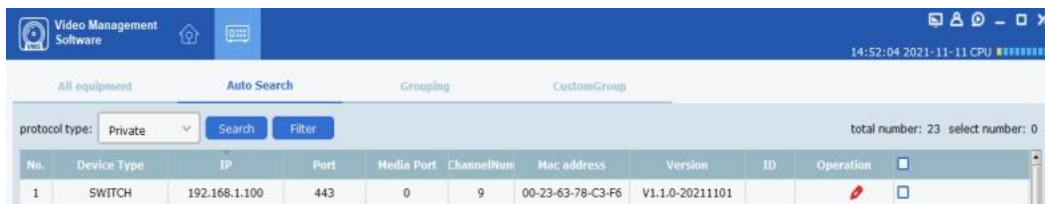


Figure 2-1 Search option

2. Set up and confirm the login password for the device on the pop up menu page, then edit the network information to let it have same network segment as the PC which installs VMS Pro client.

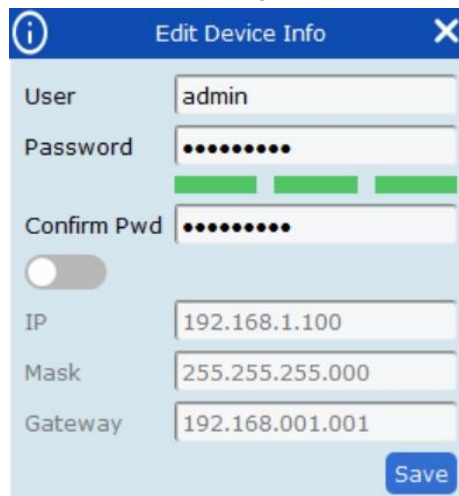


Figure 2-2 Password

3. Click "Save", the device is activated and add successfully.

Explanation

Before activating the device, please ensure the device IP address, subnet mask and gateway are under same network segment as the PC which installs VMS Pro client. So that the device can be added to the client for management.

3 Remote Configuration

3.1 System Configuration

3.1.1 Device Information

Select **Remote configuration** ---> **Configuration** ---> **Information**, basic device information will be displayed, including the device name, model, number of ports, firmware version, MAC address, and port information, etc.

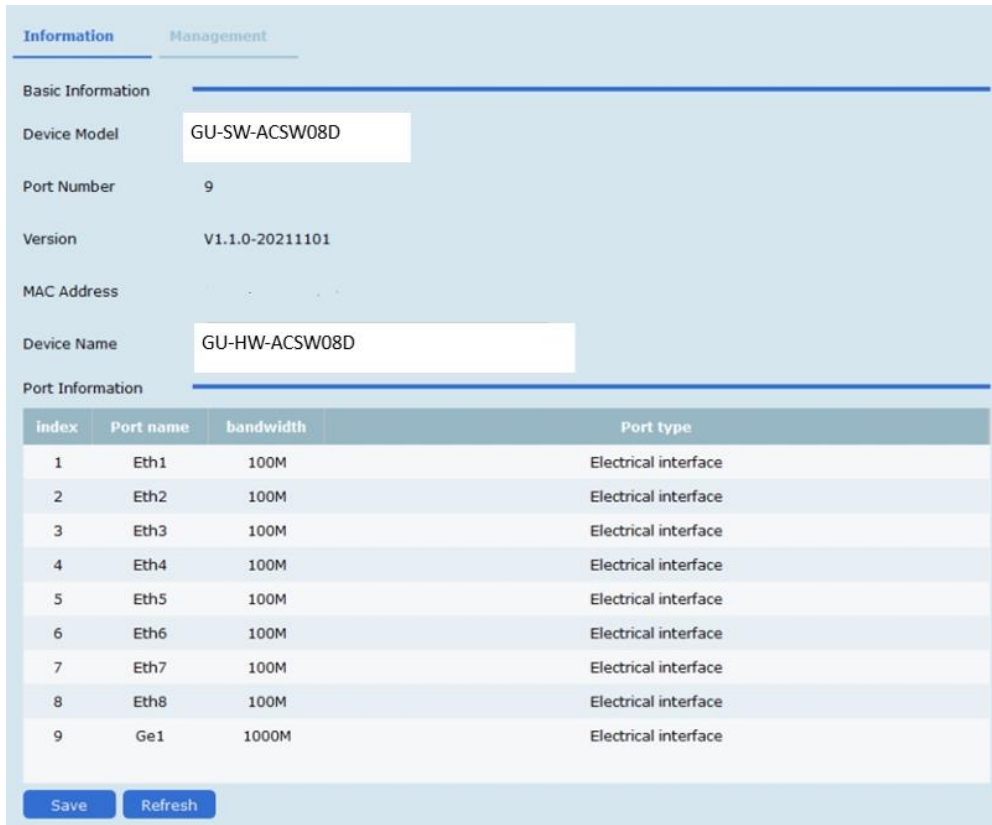


Figure 3-1 Configuration

3.1.2 Device Maintenance

You can reboot the device, restore the default Settings, download logs, and upgrade.

Operating Steps

1. Select **Remote config** --> **Management** --> **System management**, have access to the Maintenance page.

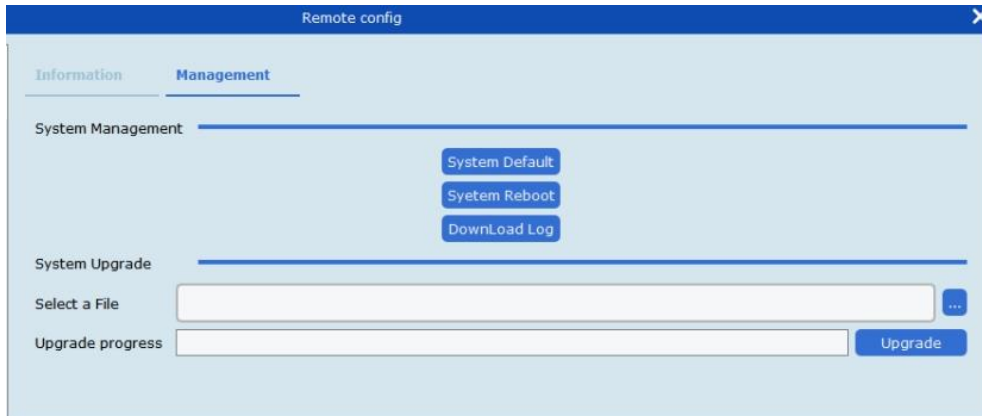



Figure 3-2 Maintenance

2. Select function buttons to achieve different functions

System default	All parameters are restored to factory Settings. After the restoration, the device needs to be reactivated.
System Reboot	Remote reboot device.
Download Log	The serial port logs from the switch can be downloaded, you can check the problems through analyzing the error types of the switch.
Upgrade	Click  , Select upgrade documents, click upgrade, the device upgrade. Current Progress shows the upgrade progress.

3.2 Network Configuration

Select **Remote config** ---> **Internet**, Network parameters can be configured for different clients.

Network parameters include IPv4 address, subnet mask, gateway address, and port.



Figure 3-3 Network

Explanation

After IPv4 address is reset, it will cause the device IP and the PC IP that are not in the same

network segment, so the device management and configuration do not work. Planning the device's IP address at first is suggested when the device being used for the first time.

3.3 Port Configuration

Select **Remote Configuration** ---> **Port** to proceed with the related configuration.

Explanation:

The supported functions of the device itself exists difference, details is subjected to the actual interface.

3.3.1 Attributes Configuration

In Attributes Configuration interface, you can configure the port rate, duplex mode, stream control, and on-off.

Rate	Include automatic negotiation 10Mbps, 100Mbps, 1000Mbps rates, etc. auto-negotiated is default
Duplex	This version only support auto-negotiated mode
Stream Control	When in the processing of the function of the port stream control, after the stream control is opened, it can avoid packet loss effectively. The function is the default open.
On-off	Port on-off, after turn off, the port haven't transmitted data, other device is still supplied by power.

3.3.2 Remote Configuration

Devices that support the remote function, turn on or turn off the switch, the port of the remote function can be turned on or off.

When the remote function has been turned on, the transmission distance can reach 250m.

After the remote function has been turned on, the port rate will be matched to 10Mbps; after it has been turned off, the port rate will be restored to auto-negotiated.

3.3.3 PoE Port Configuration

For the devices that support the PoE function, the PoE function can be turned on for providing the power to other PD devices.

Turn on or off the PoE, data transmission is not influenced.

3.4 Log management

If the device is abnormal or need to check the operation records, the log of device can be checked at the interface of log searching.

Operating Steps

1. Select **Remote Configuration** ---> **Log**, enter the page of the log.

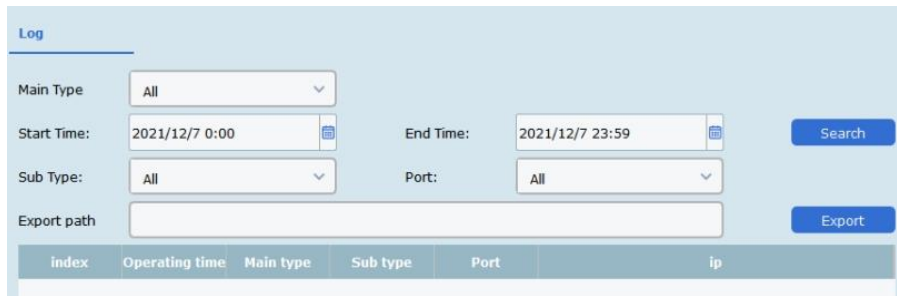


Figure 3-4 Log-files

2. Setting Search Conditions

Main Type	When searched by the type, the system, operating, account, warn, that can be selected in the main type, a total of 4.
Start Time	Searching Start Time for log
End Time	Searching End Time for log
Sub Type	Sub Type can select the related type according the different type of Main Type
Port	Searching the log in corresponding port

3. Searching Log, click “Search”, the specific log can be viewed.

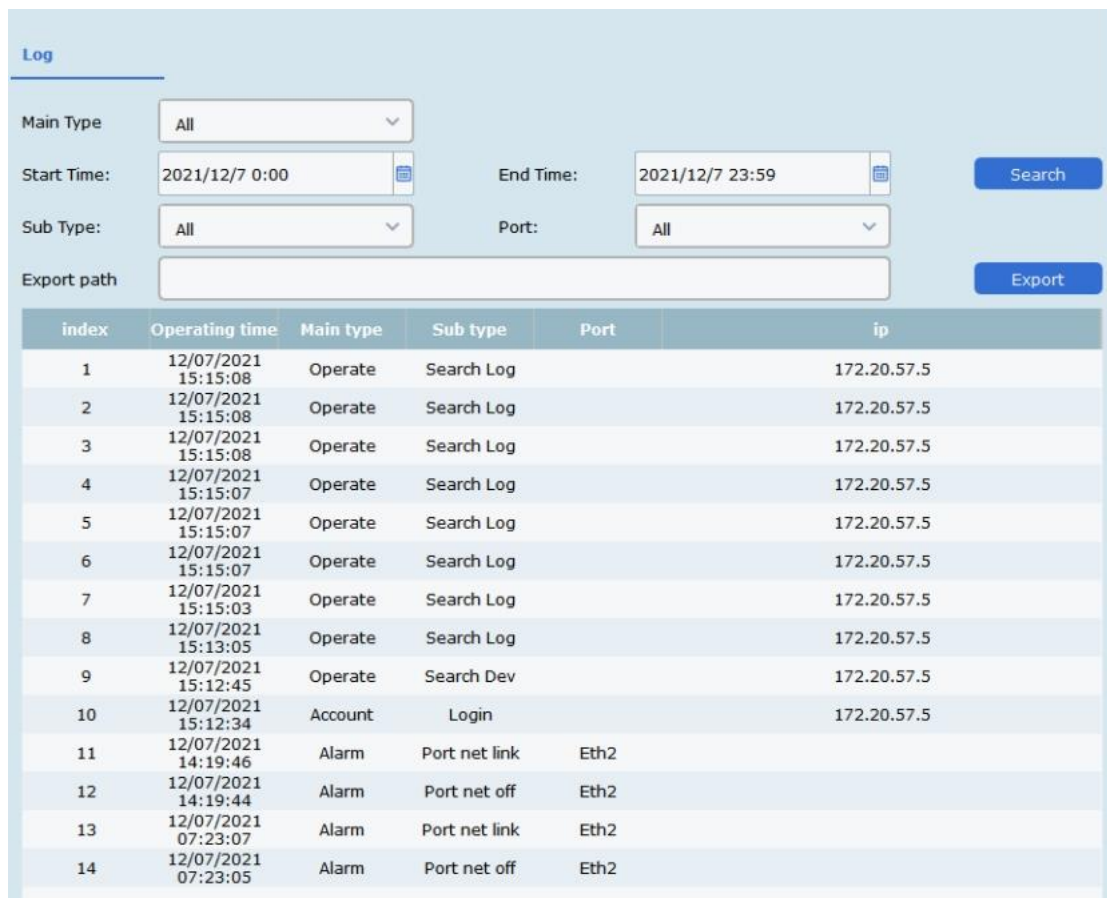


Figure 3-5 Log-file search


4. Click **Export**, select Export path.
5. Give the exported document a name, format is stored by .xlsx, log back-up has been finished.

3.5 User management

Device only support one admin user, can't add or delete, but can change the password.

Operating Steps

Select **Remote Configuration** ---> **User**, enter the edit interface of user



The screenshot displays the 'User' management interface. At the top, there is a 'User' header. Below it, the 'User Information' section is highlighted with a blue underline. The 'User' field contains the text 'admin'. The 'Password' field is masked with dots and has a green progress bar below it. The 'Confirm Password' field is also masked with dots. At the bottom of the form, there are two buttons: 'Save' and 'Refresh'.

Figure 3-6 User

Password

It consists of two or more combinations of 8-16 digits, lowercase letters, uppercase letters or special characters. Passwords are divided into three levels: weak, medium, and strong. To protect your personal privacy and corporate data, and avoid network security issues on your device, it is recommended that you set a strong password that complies with security standards.

4 Topology presentation

In the interface of topology presentation, the relation of topology in different added devices can be viewed by the client, and related configuration can be operated.

4.1 Related operating

Select the device which needs checked, selected Control Panel ---> **Topology presentation**, enter the interface of topology.

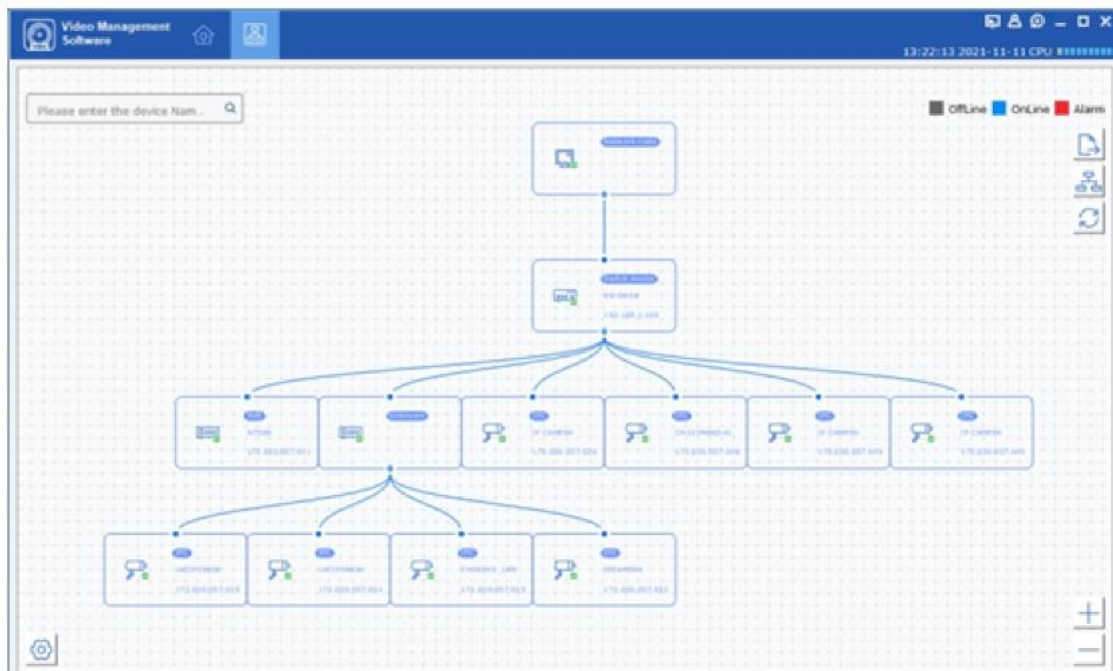


Figure 4-1 Topology




Interface Description

- Inputting the alias or IP of the device at the top left corner, corresponding topology graph can be viewed.
- The upper right corner shows the meaning of different icon color, and icons of export, refresh topology graph and path.
- Zoom in and zoom out the topology at the bottom of right corner, or zoom in and out directly through scrolling the mouse wheel.
- The level of the display layer of topology graph can be set up at the bottom left corner.

Explanation


Enter the interface of topology graph for the first time, if no topology graph is displayed, please click refresh and try again.

Related Operating/Icons description

Action/Icon	Operating	Details
Double-click Device	Look over the details of device	The type of the device and the information of IP, Panel status, and Port are displayed.
Right-click Device	Look over the device status	Skip to the interface of device status, and see details at <i>device status</i> .
	Run alarm processing	The information of alarm and event is displayed, and perform alarm elimination operation
	Run remote configuration	Skip to the interface of remote configuration, and see details at <i>Remote Configuration</i> .
	Modify the device name	Modify the name on the interface of topology
	Set as root node	Set the current device to the root node in the topology
	Upgrade device	Supports the connected NVR, DVR, and IPC upgrades
	Export topology graph	Select the export path, and export the current topology graph
	Show Path	Select IPC and current device, the path between the selected device can be displayed
	Refresh topology graph	Refresh the interface of topology and display it

4.2 Topology Setting

Operating steps

Click  which at the interface of the bottom of the left corner to proceed with the basic setting of the topology.

- Set the display level: 1~10;
- Click “OK”, save the setting.




Figure 4-2 Display

Explanation:

After the setting changed,  needs to be clicked to refresh for displaying the latest topology.

5 Device Status

In the interface of topology graph, right-click the device, then click the Device Status, the device using condition, panel status, port status, PoE port status, and the port statistics can be looked over.

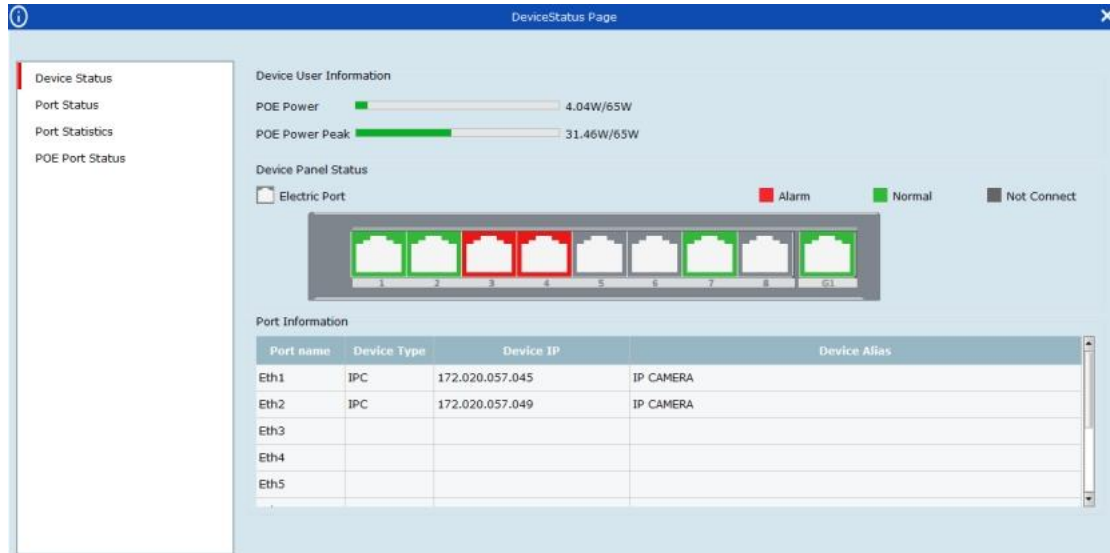

- **Port Status:** Check the condition of the port rate, the duplex mode, and the stream control
- **Port Statistics:** Check the Bytes that sent/received by the port, the packets count, the rate, and the peak rate. Set an interval of refresh automatically, and run Refreshing or Clearing data statistics by hand.
- **PoE Port Status:** Check the port switch and output power corresponding to the port number.